


Write

The first time you power on Neo, it automatically opens to AlphaWord Plus, file space #1.

1. Power on Neo.
2. Enter your text.

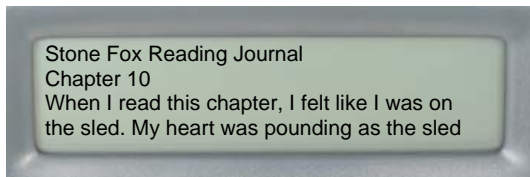

Edit

Press the **spell check** key to review your spelling. When AlphaWord Plus finds an unfamiliar word, you can

- Press the **enter** key to accept the suggested spelling.
- Press the **i** key to ignore.
- Press the **e** key to edit the word.
- Press the **c** key to see the word in context.
- Press the **a** key to add your word to the user dictionary on your Neo.

For more information, see pages 36 - 38 in your Neo User's Guide.

Print Your File

To print with Neo, you need a USB or IrDA capable printer.

USB Printing

1. Open the file you want to print.
2. Connect Neo to your USB printer with a USB cable.
3. Press the **print** key on your Neo.

For more information, see page 14 in your Neo User's Guide.

IrDA Printing

1. Open the file you want to print.
2. Align Neo's IrDA lens with the IrDA lens on the printer.
3. Press the **print** key.

If you do not have an IrDA-capable printer, you can purchase an IR printer pod.

1. Connect the IR Printer Pod to your printer.
2. Align Neo's IrDA port with the IR Printer Pod and press the **print** key.

For more information about IR printer pods, go to <http://www.alphasmart.com/products/accessories.html> and select IR Printer Pod.

Send Your File to a Computer

If you want to add graphics or special formatting to a file, you can send your file to a computer.

USB Transfer

1. Power on Neo and open the file you want to send.
2. Connect Neo to your computer with the USB cable.
3. Open any application on your computer that accepts text.
4. Press the **send** key on your Neo.

IrDA Transfer

If you have an IrDA-capable computer, you can use Neo's built in IrDA transfer to send files. You need to install **AlphaBeam** software on your computer for IrDA transfer.

1. Launch **AlphaBeam** on your computer and minimize or hide it.
2. Open any application on your computer that accepts text.
3. Power on Neo and open the file you want to send.
4. Align the IrDA ports on your Neo and your computer.
5. Press the **send** key.

For more information, see pages 9 – 12 in your Neo User's Guide.

If you do not have an IrDA-capable computer, you can purchase an infrared pod.

1. Install the **AlphaBeam** software on your computer. (This software ships with each Infrared Pod.)
2. Launch **AlphaBeam** and minimize it.
3. Open any application that accepts text on your computer.
4. Align Neo's IrDA lens with the infrared Pod and press the **send** key.

For more information about infrared pods, go to <http://www.alphasmart.com/products/accessories.html> and select Infrared Pods.

